 


Remote Control User's Guide

POTENZA ST

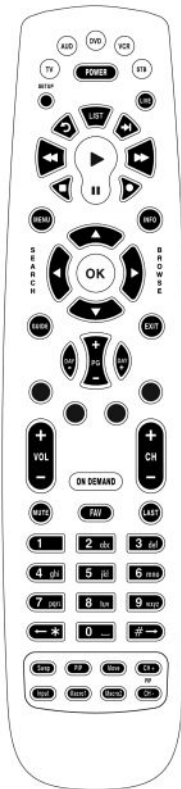

Getting Started



 
Note

Make sure all home theater equipment is ON before starting remote control setup.

- 1 Remove battery cover.



- 2 Insert 2 AA batteries. Match the + and - marks.



- 3 Replace battery cover.



Tip

The Mode Key will blink 5 times with each key-press when batteries need replacement.

Setup Method A: Popular Brands

- 1 Press and hold SETUP until mode key blinks twice.

SETUP



- 2 Press the mode key for device you wish to setup. The mode key stays lit.



- 3 Find your device and brand from the charts below and note the DIGIT key assigned to your brand. Press and hold down the DIGIT key for your device/brand.



- 4 Let go of the key when your device turns off. Setup for that device is complete.

2 BLINKS = SUCCESS
1 LONG BLINK = FAILURE



Tip,

If your brand does not appear in the brand chart, perform setup using either DIRECT CODE ENTRY or CODE SEARCH.

DIGIT Numéro	TV	DIGIT Numéro	DVD/VCR	DIGIT Numéro	Audio
1	Insignia	1	Insignia	1	Bose
2	LG	2	LG	2	Denon
3	Panasonic	3	Panasonic	3	LG
4	Philips / Magnavox	4	Philips / Magnavox	4	Onkyo
5	Samsung	5	RCA	5	Panasonic
6	Sanyo	6	Samsung	6	Philips
7	Sharp	7	Sharp	7	Pioneer
8	Sony	8	Sony	8	Samsung
9	Vizio	9	Toshiba	9	Sony
0	Westinghouse	0	Vizio	0	Yamaha

Setup Method B: Setup TV Control Using Direct Code Entry

1 Press the TV mode key.

 


2 Press and hold SETUP until TV mode key blinks twice.

SETUP



3 Enter 1st TV code for your TV brand from the code list.

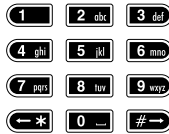

4 Press the power button to test TV control. If the TV turns off, setup is complete.



5 If the TV does not turn off, repeat process using the next code for your TV brand.



Codes: TV

Acer	1339
Admiral	0093, 0463
Advent	1570
Affinity	3716, 3717
Aiko	0092
Alwa	1362
Akai	0812, 1675, 0702, 0765, 1385
America Action	0180
Anam	0180
Anam	0180
AOC	1589, 2087, 1365, 1590, 2014, 2479, 3707, 3720
Aomni	1623
Apex Digital	2397, 0748, 0879, 0765, 1217
Astar	1548, 1738
Audiovox	1546, 0451, 0180, 0092, 1276, 1766, 1769, 1865, 1868, 2121, 2413, 3065
Auria	2087, 2277
Aventura	0171
Bell & Howell	0154
Berkshire	0047
Bradford	0180
Broksonic	0463, 1938
Candle	0056
Carver	0054
Celebrity	0000
Celera	0765
Champion	1362
Changhong	0765
Citizen	0060, 0092, 0056
Coby	3478, 3627, 2315, 2344, 2306, 2314, 2326, 2338, 2345, 2347, 2348, 2360, 3629, 1538
Commercial Solutions	0056
Concerto	0056
Contec	0180
Craig	0180, 3423
Crosley	0054, 0000
Crown	0180
Curtis	2397, 3577, 2352, 2466, 2855, 3228, 1326
Curtis Mathis	0702, 0054, 0093, 0060, 0047, 0154, 0451, 0145, 0056, 1347, 1959
CXC	0180
Cytron	1326
Daewoo	1661, 0661, 0092, 0154, 0145
Dell	1264, 1080, 1863, 2491
Denon	0145
Digital Lifestyles	1765
Disney	1665, 1892
Dumont	0017
Durabrand	0178, 0171, 0463, 0180, 1665
Dynex	2049, 1463, 1785, 1810, 2184
Electric Mirror	3166
Electrobrand	0000
Electrograph	1755, 1623
Electrohome	0463, 1570, 1670
Element	1886, 1687, 2183, 2964, 3559
Elite	1457
Emerson	1864, 1394, 1886, 0171, 0178, 0154, 0451, 0463, 0180, 1661, 1913, 1944, 1963, 2183, 2776, 3559
Emprex	1765
Envision	1589, 2087, 1365, 2014
Epson	1122
FSA	0812, 0171, 1944, 1963
Fisher	0154, 1362
Fluid	2964
Fujitsu	0809
Funai	0000, 0178, 0180, 1271, 1904, 1963
Gateway	1756, 1755
GE	1447, 0178, 0047, 0051, 0451, 0765, 1347, 1547
GM	1864, 1886, 0171, 1665, 1963
Gibraltar	0017
Go Video	1823, 1831
Goldstar	0178, 0056

GPX	3196
Grumpy	0180
Haier	1753, 1749, 2309, 1748, 3382, 3382, 1570, 2293
Hallmark	0178
Hanspree	1348, 1351, 2786
Harley Davidson	1904
Harmon/Kardon	0054
Harvard	0180
Havemmy	0093
Hello Kitty	0451, 2776
Hewlett Packard	1642
Hisense	3519, 2183, 0748, 1314, 1660, 2098
Hitachi	1643, 0145, 1145, 0056, 0679, 1576, 1904, 2756
ilo	1394, 1463, 1286, 1665, 1684, 1990
Infinity	0054
Initial	1990
Insignia	2049, 1641, 1326, 1564, 1423, 2002, 1785, 1892, 2184, 2417, 2751, 0171, 0463, 2088, 1963, 1660, 1517, 1385
Inteq	0017
iSymphony	3094, 3118, 3382
JBL	0054
JCB	0000
JCA	2256
Jensen	1326, 2541
JVC	1774, 1601, 2271, 2264, 0053, 0650, 0463, 0731, 1253, 1670, 1923, 2321
KDS	1498, 1687
KEC	0180
KLB	0765
Konika	1385, 1831
KTV	0180
Lasonic	3198
LG	1423, 2731, 2358, 2424, 0178, 3397, 1265, 2834, 2098, 2612, 0017
Lloyd's	1904
LodgingStar	2147
Luxman	0056
LXI	0156, 0054, 0178, 0047, 0154
MAG	1498, 1687
Magnasonic	1913
Magnavox	1867, 1454, 1455, 2597, 2372, 1866, 0054, 0171, 0706, 1365, 1904, 1913, 1944, 1963, 1990, 2002, 3708, 1755, 0051
Marantz	1454, 0054, 1398
Matsushita	0250, 0650
Maxent	1755, 1757
MB Quart	1868
Megatron	0178, 0145
Memorex	0463, 0178, 0154, 0150, 1570, 1665, 1670, 1785, 1892, 1924, 1927, 1938
MGA	0178, 0145
Midland	0047, 0017, 0051
Mintek	1990
Mitsubishi	1250, 0150, 1797, 0093, 0178
Motorola	0093
MTC	0060, 0056
Multitech	0180
NAD	0156, 1156, 0178, 0056
Naxa	2104, 3154, 3382
NEC	0056, 1398, 1704, 1797, 2293
NetTV	1755
Nexus Electronics	2183
Nikko	0178, 0092
Norcent	1589, 0748, 1365, 1590
Norwood Micro	1286
NTC	0092
Nullvision	1657, 2158
Olevia	1610, 1144, 1240
Omwa	0180
Optimus	0250, 0650, 0154, 1913, 1924, 1927
Optonica	0093
Orion	0463, 1463, 1938, 3540


Panasonic	1480, 1291, 0250, 0650, 2264, 1927, 1924, 1947, 0051, 1941, 1310, 1271, 1946
PARK	2104
Penney	0156, 0178, 0060, 0047, 0051, 1347
Philco	1394, 0054, 0171, 1271, 1665, 1963
Philips	1454, 1867, 2372, 1744, 1455, 2374, 2597, 1866, 0690, 0054, 2704, 1394, 0171, 1365, 1944, 1990, 2902
Pioneer	1457, 0679, 1260, 1398
Planer	1589
Polaroid	1523, 1498, 0765, 1276, 1286, 1314, 1326, 1385, 1538, 1687, 1766, 1767, 1769, 2002, 2121
Portland	0451, 0092, 1661
Prima	1753, 1749, 1785
Prism	0051
Proscan	1447, 0047, 1347, 2147, 2183, 2256, 3577
Proton	0178
Proview	1498, 1687
Pulsar	0017
Quasar	0250, 1291, 0650, 0051, 1924, 1927
Radioshack	0178, 0047, 0154, 0180, 0056, 1904
RCA	1447, 2746, 2434, 2932, 2247, 2187, 0047, 1781, 0093, 3577, 3147, 2855, 2002, 1959, 1547, 1385, 1347, 0679, 0051, 1661, 0178, 0154, 0180, 0056
Realistic	0178, 0154, 0180, 0056
RevolutionHD	1623
Ranco	0017, 1398
Sampo	1755
Samsung	2051, 0812, 0702, 0060, 1060, 0766, 0814, 1959, 1596, 0650, 0178, 0056
Sansui	0171, 0463, 1463, 1670, 1829, 1904, 1938, 3540, 3564
Sanyo	1142, 0154, 1362, 0054, 0088
Sceptre	0878, 1217, 1360, 1599, 2337, 2506, 2528
Scotch	0178
Scott	0178, 0180
Sears	0156, 0054, 0178, 0047, 0171, 0154, 0056, 1904
Seiki	0178, 2964, 3559, 3560
Seleco	1351
Sens	1865
Sharp	2340, 0818, 0093
Seng Chia	0093
Shenwood	1399, 3061
Sigmac	3423, 3477
Signature	0054
Sole	1623
Sony	0810, 0000, 0834, 130, 1685, 1904
Soundesign	0178, 0180
Soyo	1831
Spectroniq	1498, 1687
Squareview	0171
SSS	0180
Starlite	0180
StarbriteTV	1610, 2337, 2528, 2935
Superscan	0864, 0093, 1944
Supersonic	1753, 2104, 3154, 3593
Supreme	0000
SVA	0748, 1963
Symphonic	1394, 0171, 0180, 1904, 1913, 1944
Syntax	1610, 1144, 1240
Tandy	0093
Tatung	1756, 1286
TCL	2434, 3183
Technics	0250, 0051
Techwood	0051, 0056
Teknika	0054, 0060, 0180, 0150, 0092, 0056
Telefunken	0702, 0056
Thomas America	1904
TMK	0178, 0056

Telefunken	0702, 0056
Thomas America	1904
TMK	0178, 0056
TNCl	0017
Toshiba	1524, 1656, 2724, 0156, 1156, 0822, 1256, 2006, 0060, 0154, 1265, 2684, 1959, 1945, 1704, 0650, 1369
TruTech	1665, 1723, 2066
TVS	0463
US Logic	1286
Venturer	1865, 1868
Victor	0053
Vidikron	0054, 1398
Vidtech	0178
Viewsonic	2087, 2014, 2049, 0864, 1755, 1564, 0885, 1330, 1365, 1542, 1578, 1627, 2277, 3706
Viore	1684, 2104, 2352, 2094, 3118, 3382
VisionQuest	3380
Vivitek	1369
Vizio	1758, 3758, 2757, 3358, 2512, 1756, 0864, 0885
Wards	0156, 1156, 0054, 0000, 0178, 0060, 0047, 0154, 0017, 0051, 0180, 0056, 1347
Waycon	0156
Westinghouse	1712, 3579, 0885, 3382, 1300, 1577, 3094, 3470, 0889, 1282, 2293, 0451, 1217
White Westinghouse	0463, 1661
Wyse	1365
Zenith	1423, 0017, 2358, 2731, 0000, 0178, 0047, 0463, 1265, 1145, 0145, 0092, 1661, 1365, 1904


Setup Method C Alternative Setup Method: Code Search

MUG66950_A01

 NOTE: Use this method only if you cannot find a working code using steps 2 and 3.

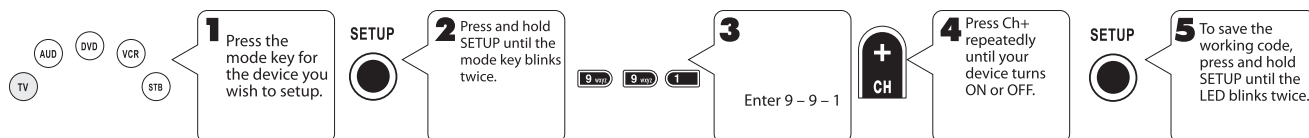


Setup Control of Other Equipment

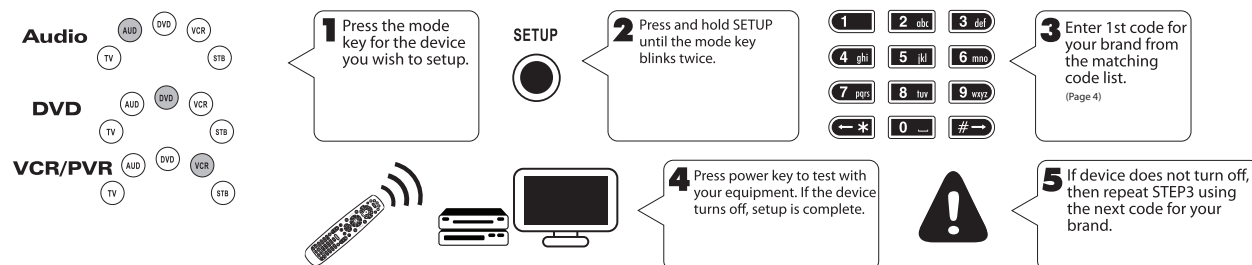 


Lock Volume Controls to Audio Device

 NOTE: Volume Control defaults to TV. Perform this step only if you wish to use an AUDIO receiver, Amp, or home theater surround system for Volume Control when watching cable.

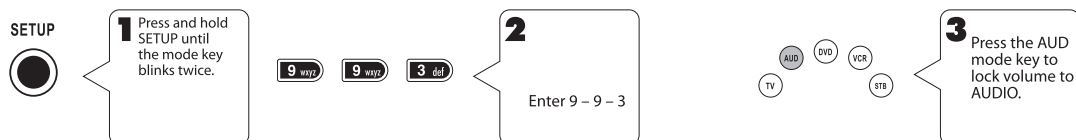

 Program the Power button to turn on/off other devices

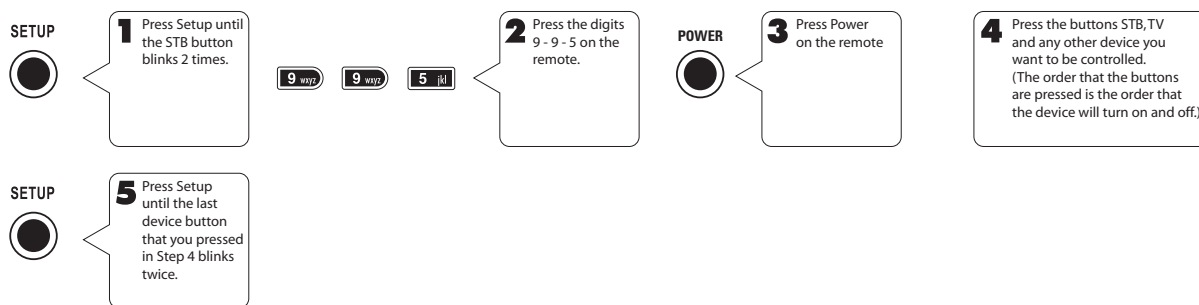

TROUBLESHOOTING

- Problem:** Mode key does not blink when a key is pressed.
Solution: Replace batteries.
- Problem:** Mode key blinks, but remote does not control my equipment.
Solution: Press correct mode key and point remote at equipment you need to control.
- Problem:** Tried all codes for my brand of device and none work.
Solution: Try **CODE SEARCH (STEP 2a)** method or go to www.urcsupport.com for model-based search.
- Problem:** I want to switch **VOLUME LOCK** from **AUD** to **TV** control.
Solution: Follow **STEP 4**, but press the **TV** mode key instead of **AUD** mode key.
- Problem:** My **TV** power turns off when my cable power turns on.
Solution: Manually press the power button on the front of the cable box or your **TV** to get back in sync.

Codes: DVD Players

Accurian	0675, 1416	Kenwood	0490, 0534	JVC	1164, 0623, 1602, 0558, 0867, 1275, 2855	RE-BL	2555
Anthem	2820	KLH	0717, 1020, 1149	McIntosh	3025, 2365	Rotel	0623
Apex Digital	0672, 0717, 0755, 0794, 0797, 1004, 1020	Lennox	1127	Memorex	1533, 1273	Samsung	0199, 0573, 2069, 1075, 2369, 0490, 1044
Armo	1023	Lexicon	2454	Memorex	0831, 1270, 2213, 2331, 3153	Sanyo	1470, 1573, 2113, 2269, 2489, 2556, 3492
Audio Authority	2555	LG	0741, 1602	Messiah Entertainment	2396	Schneider	0670, 0873
Audiovox	0717	LiteOn	1058, 1158, 1416, 1738	Microsoft	0522, 2083	Sony	0646
BBK	0655	Loewe	0511	Mintek	0717	Sensory Science	1158
BBK	1224	Magnavox	0539, 0503, 0675, 0646, 1345, 1506	Mitsubishi	1521	Sharp	0675, 2250, 0630, 1419
Bel Canto Design	1571	Marantz	0529, 2414, 2481, 3444	NAD	0741	Sherwood	1043, 3052, 3925
Blaupunkt	0717	Emerson	0675, 2213	Naxa	2235	Shinonic	0533
Blue Parade	0571	Fisher	0670	Nesa	0717	Sony	1516, 1633, 1533, 0533, 1070, 0864, 0772
Broksonic	0695	Funai	0675	Norcent	1003, 1107	Sylvania	1033, 1536, 1540
California Audio Labs	0490	Gateway	1158, 3228	Nyko	2340	Symphonic	0675
Cambridge Audio	2808	GE	0522, 0717	Olevia	2331	Technics	0490, 0703
Cinea	0831	GFM	0675	Onkyo	2147, 1627, 0627, 0503, 1769, 2215, 2562	Theta Digita	0571
CineVision	0833	Go Video	1075, 0741, 0744, 0833, 1044, 1158	Oppo	0575, 1224, 2545, 2185	Tivo	1503
Citizen	2116	Goldstar	0741	Panasonic	1641, 0490, 3641, 1579, 0503, 0703, 1762	Toshiba	0503, 2705, 3157, 2277, 1769, 1154, 1503
Coby	2492, 0778, 0852, 1086, 1107, 1165, 1351	GPX	2235	Philco	0675	Urban Concepts	0503
Craig	0831	Greenhill	0717	Philips	2056, 0529, 2434, 2084, 0503, 0675, 0646	Viore	2553
Curtis	2235, 3401, 3403	Grundig	0539, 0705	Pioneer	1158, 1267, 1340, 1354, 1506	Viao	1226, 2563
CyberHome	0816, 1023, 1129, 1502	Harmon/Kardon	0582, 0702, 1229, 2927, 3228	Polaroid	0142, 2442, 1571, 0571, 0525, 0631, 1512	WBElectronics	2555
Daewoo	0705, 0833, 1234, 1242	Hello Kitty	0831	Philco	2845	Xbox	0522, 2083
Denon	2258, 1634, 2748, 0490	Hitachi	0573, 0664	Philips	1020, 1061, 1086	Yamaha	0490, 2298, 0539, 0497, 0646, 0545, 0817
DigitalMax	1738	Hiteker	1500, 1588	Pioneer	0539	Zenith	1354, 1416, 3995
Digix	3850	Initial	0717	Presidian	0675, 1738		0503, 0741, 0869
Disney	0675, 1270, 3246	Insignia	0675, 0741, 2596, 2095, 2428	Pro Vision	0778		
Dynex	2596	Integra	2147, 0627, 0571, 1769, 1634	Proced	0672		
Electrohome	2116	Irradio	0646	Proscan	0522		
		JBL	0702	RCA	0522, 0571, 1769, 0717, 1500, 2213, 2587		
					2919		

Codes: Blu-ray

Anthem	2820	LG	0741, 1602	Panasonic	1641, 3641	Toshiba	2705, 3157
Cambridge Audio	2808	Magnavox	0675	Philips	2084, 2434	Viore	2553
Denon	2258, 2748	Marantz	2414	Pioneer	0142, 2442, 2854	Viao	2563
Harman/Kardon	2927, 3228	Memorex	2331	Samsung	0199	Yamaha	2298
Insignia	0675, 2428, 2596	NAD	2572	Sharp	2250		
Integra	2147	Olevia	2331	Sony	1516, 0772		
JVC	2365, 2855	Onkyo	2147, 2562	Sylvania	0675		

Codes: VCRs and PVRs

Accurian	0000	GFM	1593	MTC	0067	Sansky	0048, 0039
Admiral	0048	Goldstar	0037, 1237	Multitech	0000	Sansui	0000, 0067
Adventura	0000	Gradiente	0000	NEC	0067	Sanyo	0046
Aiwa	0037, 0000	Harley Davidson	0000	Nikko	0037	Scott	0045, 0043
Allegro	0039	Harmon/Kardon	0081	Olympus	0035	Sears	0035, 0037, 0000, 0042, 0636
American High	0035	Headquarter	0046	Optimus	1062, 0162, 0037, 0048, 0593	Sharp	0048, 0848
Audiovox	0037	Hitachi	0000, 0042, 0593	Panasonic	1062, 0035, 0162, 0616	Signature	0035
Calix	0037	Hughes Network System	0042	Penney	0035, 0037, 0042, 1237	Sonic Blue	0616
Canon	0035	Humax	0739	Pentax	0042	Sony	1232, 0032, 0035, 0033, 0000, 0636
Carver	0081	Instant Replay	0035	Philco	0035	STS	0042
Citizen	0037	KEC	0037	Philips	0739, 0035, 0081	Sylvania	0035, 0081, 0000, 0043, 0593, 1593
Craig	0037	Kenwood	0067	Pilot	0037	Symphonic	0000, 0593, 1593
Crosley	0081, 0000	Kodak	0035, 0037	Pioneer	0067	Tashiko	0037
Curtis Mathis	0035, 0162	Lloyd's	0000	Polk Audio	0081	Teac	0000
Daewoo	0045	LXI	0037	Presidian	1593	Technics	0035, 0162
Denon	0042	Magnasonic	0593	Proscan	0060, 0202	Teknika	0035, 0037, 0000
DirectV	0739	Magnavox	0035, 0039, 0081, 0000, 0593, 1593	Pulsar	0039	Thomas America	0000
Durabrand	0039	Marantz	0035, 0081	Quarter	0046	TiVo	0739, 0636
Dynatech	0000	Marta	0037	Quasar	0035, 0162	Toshiba	0045, 0043
Electrohome	0037, 0043	Matsuhita	0035, 0162	RadioShack	0000	Totevision	0037
Electrophonic	0037	MEI	0035	Radix/Randez	0037	Vector	0045
Emorex	0032	Memorex	0035, 0162, 0037, 0048, 0000, 0046, 1237	RCA	0060, 0035, 0042, 0202		
Emerson	0037, 0000, 0043, 0593, 1593	NAGA	0043	Realistic	0035, 0037, 0038, 0000, 0046		
Fuji	0035, 0043	Minolta	0042	Replay/TV	0616		
Funai	0000, 0593, 1593	Mitsubishi	0067, 0043	Runco	0039		
Garrard	0000	Motorola	0035	Samsung	0045		
GE	0060, 0035, 0202						

Codes: Audio Receivers and Amps

Aiwa	0158, 0189, 0121, 1089, 1641	Kenwood	1313, 1570, 1293, 0186	RCA	1609, 1023, 1254, 0054, 1123, 2041, 2426	Codes: Audio Receivers / Amps	
Altec Lansing	2595	Klipsch	3092	Rio	2611, 2655, 2719, 3281, 3297	Códigos: Audio Receptores / Amps	
AMC	1077	LG	2197, 2676, 2284, 1293	Samsung	1868, 2809, 1295, 3154, 2137, 1304, 1500	Anthem	2220
Anam	1609	Linn	0189	Sansui	0189, 1089	Classe	1915
Apex Digital	1774	Magnavox	1189, 1269, 0189, 1089, 1831	Sanyo	1469, 1801	Denon	2134, 2706
AudioTronic	1189, 0189	Marantz	1189, 1269, 0189, 1089, 1289, 2114	Sharp	0186	Halco	1934
Bose	1933, 1629, 1229, 1253, 1841	McIntosh	1289	Sharper Image	1263	Harmon/Kardon	3045,
Carver	1189, 0189, 0121, 1089	Micromega	1189	Sherwood	1077, 1517, 1653, 1905, 2169	Krell	2463
Coby	1263, 1389, 2689, 2748	Musimagic	1089	Sonic Blue	1869	Marantz	2138, 2463
Denon	2857, 1360, 1142, 2247, 2279, 2516, 2820	Myriad	1189	Sony	1622, 1759, 1758, 2172, 1822, 2475, 2522,	Parasound	1934
Dynex	2971	Nakamichi	1313		1058, 1441, 1258, 1158, 1858, 0158, 1658		
Fisher	1801	NexTech	1751		2216, 1558, 2671, 3257, 3372, 3456		
Garrard	0463	Norcent	1389, 1751				
Gateway	1517	Nova	1389	Stereophonics	1023		
Glory Horse	1263	Denon	1805, 1320, 2503, 2730, 0135, 1531, 2451	Sunfire	1313		
GPX	3214	Optimus	1023, 0186	Teac	0463		
Harmon/Kardon	2241, 1304, 2443, 0110, 0189, 0891, 1306	Panasonic	2967, 2452, 1633, 1275, 1308, 1518, 1676	Technics	1633, 1308, 1518		
Hitachi	1801		3309, 3055, 2745, 2221, 2105, 1764, 1763	Thorens	1189		
iLive	2013	Philips	1548, 1316, 1288	Toshiba	1123, 1788		
Insignia	1030, 1077, 1751, 1893, 2126, 2169, 2175		1189, 1269, 2459, 2311, 0189, 1989, 1266	Victor	0074		
Integra	2472, 2474, 2929, 2966	Pioneer	1831	Wards	2061, 2467, 0376, 3030, 0176, 1815, 1276		
iSymphony	1805, 1320, 2503, 2730, 0135	Polk Audio	1935, 1023, 1123, 1384, 2612		1375, 1376, 2455, 0186, 3267, 3270, 3313		
JBL	2442	Proscan	0189, 1289, 2244, 2270		3580, 3626		
	2241, 0110, 1306	RadioSack	1254	Zenith	2197, 1293, 1869		
Coby	1676, 2239, 1374, 3115, 2331, 0074, 1263		1263				
	1495, 1871, 2040						

Codes: Audio / Accessory

Acoustic Research	2226	Roku	3661	JBL	3535
Altec Lansing	2251	Samsung	2660	JVC	3049
Apple	1115	Sharp	3097	LG	3217
Definitive Technology	3645	Sony	2610	Martin Logan	3526
Denon	2502	SpeakerCraft	3661	Onkyo	3326
Dynavox	3231	Toshiba	3627	Panasonic	3409
Haier	3516	VIZIO	2454, 2695	Philips	2675, 3282
Harman/Kardon	3517	Yamaha	2021,	Pinnacle Speakers	3728, 3774
iLive	3175		2332, 2334	Polk Audio	3429
Jamo	2228	Audio Sound Bars			3661
JBL	3535	Acoustic Research	2226	Proficient	2660
JVC	3049	Altec Lansing	2251	Samsung	3097
LG	3217	Definitive Technology	3645	Sharp	2610
Martin Logan	3526	Denon	2502	Sony	3661
Onkyo	3326	Dynavox	3231	SpeakerCraft	3627
Panasonic	3409	Haier	3516	Toshiba	3627
Philips	2675	Harman/Kardon	3517	VIZIO	2454, 2695
Polk Audio	2228, 3429	iLive	3175	Yamaha	2458, 2021
Proficient	3661			ZVOX	2332, 2334